Feature List

PRDO 202/203
PRDO 204/205

prima

Control Panel

Model PRD0204/PRD0205

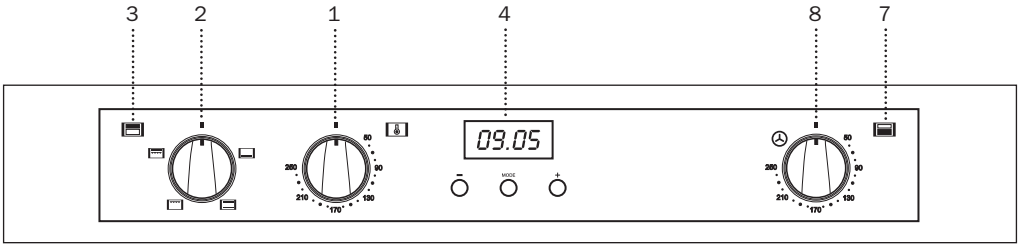

Model PRD0202/PRD0203

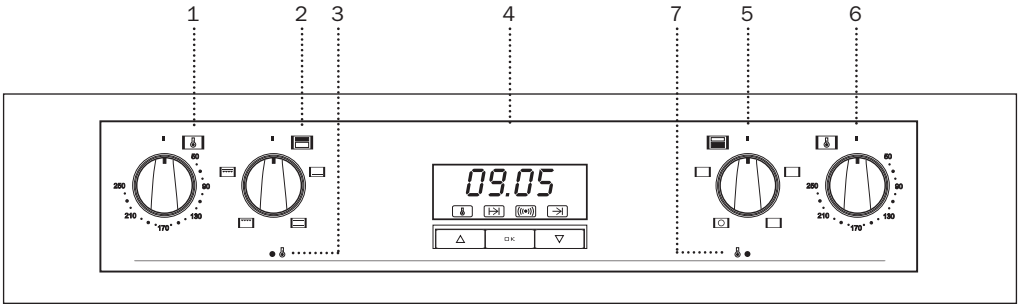

Top cavity

1 Temperature selector.

2 Function selector.

3 Heating indicator light. Indicates that the heat is going to the food and it goes out when the set temperature is reached.

Main cavity

4 Electronic clock.

5 Function selector.

6 Temperature selector.

7 Heating indicator light.

8 Fan oven + temperature selector.

Oven Functions

Model PRD0204/PRD0205

Top cavity: ▯ / / / / /

Main cavity: /

Model PRD0202/PRD0203

Top cavity: ▯ / / / / /

Main cavity: ▯ / / / / /

▯ **Switch off oven**

Conventional

It is used for sponges and cakes where the heat received must be uniform to achieve a spongy texture.

Lower Element

Heats only from beneath. Suitable for heating dishes and raising pastry and similar.

MaxiGrill

Allows greater surfaces to be prepared, than with the grill, together with higher power reducing the time required for browning of the food.

Grill

For preparing dishes with superficial roasting. It allows the outer layer to be browned without affecting the inside of the food. Ideal for flat food, such as steaks, ribs, fish, toast.

MaxiGrill with fan

Allows uniform roasting at the same time as surface browning. Ideal for grills. Special for large volume pieces, such as poultry game etc. It is recommended to put the item on a rack with a tray beneath to collect the stock and juices.

Caution

While using the Grill, MaxiGrill or MaxiGrill with fan, the door must be kept closed.

Turbo

The fan distributes the heat produced by an element located at the rear of the oven. Due to the uniform heat distribution, it allows roasting and baking to take place on two levels at the same time.

Defrosting

This cooking mode is suitable for gentle defrosting of delicate food to be consumed unheated, e.g.: cream, custard, pastry, tarts, cakes, fruit,...

Note

The pilot light remains on in any cooking function.

Use of the Oven

Model PRD0204/PRD0205

Setting the Time on the Clock

On connecting the oven you will notice that daytime flashes on the display, starting from 0:00 and the auto symbol A flashes.

Press the “+” and “-” buttons simultaneously and then pressing the “+” or “-” buttons the correct time can be set on the display.

Manual Use

After setting the correct time, the oven is ready for use. The symbol is illuminated on the display. Select a temperature and a cooking function.

To switch off the oven, set the controls to the position.

Warning Function

This function generates a buzzer interval alarm signal at a specified time.

1 Press the MODE button until the symbol begins to flash.

2 Choose the time when you want the alarm to sound, pressing the “+” or “-” buttons.

3 Subsequently, the symbol will remain on indicating that the alarm is programmed.

4 At the end of the programmed time, an acoustic interval signal will sound and the symbol will begin to flash.

5 Press any button to turn off the acoustic signal.

The buzzer signal frequency can be changed by MINUS in 3 circular steps. For listening to the actual valid signal, press “-” button for some seconds while the display reads the time of the day. Every new key press within the time window changes the buzzer signal. Now this tone is valid as program end alarm signal.

Programming the Cooking Time

This function allows to programme the oven to cook for a specified time, after which it will switch itself off.

1 Press the MODE button until the display automatically switches over between “dur” display and duration time setting mode. The symbol A is flashing.

2 Select the duration, pressing the “+” or “-” buttons.

3 Subsequently, the symbol A that was flashing will light, indicating that the oven will switch itself off automatically.

4 The display will then show the current time.

5 Select a temperature and cooking function.

6 When the set time has elapsed the oven will disconnect, the symbol will switch off, an acoustic interval signal will sound and the symbol A will begin to flash.

7 Press any button to switch off the acoustic signal, reconnecting the oven.

8 Set the controls in the position ☐ to switch off the oven.

Programming the End of Cooking Time for the Oven

This function allows to establish the exact hour, after which the oven will switch itself off.

1 Press the MODE button until the display automatically switches over between “End” display and end time setting mode. The symbol A is flashing.

2 Select the time that cooking is to finish, pressing the “+” or “-” buttons.

3 Subsequently, the symbol A that was flashing will light, indicating that the oven will switch itself off automatically.

4 The display will then show the current time.

5 Select a temperature and cooking function.

6 When the programmed time is reached the oven will disconnect, the symbol will switch off, an acoustic interval signal will sound and the symbol A will begin to flash.

7 Press any button to switch off the acoustic signal and the oven will reconnect.

8 Set the controls to the position ☐ to switch off the oven.

This function may be used even though you are already cooking in your oven. To do so, follow the instructions given except Nº 5.

Programming the Duration and Automatic Stop

This function is used to control the duration and the time at which the oven will turn itself off. This function allows the oven to start and stop automatically.

1 Press the MODE button until the display automatically switches over between “dur” display and duration time setting mode. The symbol A is flashing.

2 Select the duration, pressing the “+” or “-” buttons.

3 Subsequently, the symbol A that was flashing will light, indicating that the oven will switch itself off automatically.

4 Press the MODE button until the display automatically switches over between “End” display and end time setting mode. The symbol A is flashing.

5 Select the time that cooking is to finish, pressing the “+” or “-” buttons.

6 Subsequently, the symbol A that was flashing will light, the symbol will switch off and the oven will remain disconnected. Your oven is programmed.

7 Select a function and cooking temperature.

8 When the time to begin cooking is reached, the oven will switch itself on and will continue cooking during the programmed time.

9 When the programmed finishing time is reached, the oven will disconnect, an acoustic interval signal will sound and the symbol A will begin to flash.

10 Press any button to switch off the acoustic signal and the oven will reconnect.

11 Set the controls to the position ☐ to switch of the oven.

Caution

Pressing the MODE button the display on the screen shows any function programmed. It can be changed by pressing the “+” or “-“ buttons.

Program times for automatic programs can be cleared by pressing “+” and “-” simultaneously. For clearing warning function, first you must be select the warning function in the display.

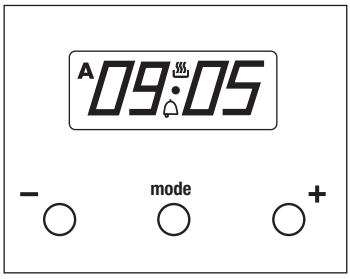

Model PRD0202/PRD0203

Setting the Time on the Electronic Clock

When the oven is connected to the power supply, the indication 00:00 flash on the display. Press ▽ or △ to set the time on the clock. The clock beeps twice to confirm the selected time.

If you wish to modify the time, press ▽ or △ until the current time flash on the screen. Press OK. Then press ▽ or △ to modify the time. The clock beeps twice to confirm the modification.

Manual Operation

The oven is ready to be used when the clock has been set. Select a cooking function and a temperature.

Set the controls to ⏻ to turn the oven off.

Functions of the Electronic Clock

Alarm: Creates an alarm signal when the period of time finishes; the oven does not need to be in use in order to use this function.

Cooking Time: To cook for a selected length of time; the oven turns itself off automatically when the time finishes.

End Cooking Time: To cook until a set time; the oven turns itself off automatically when the time finishes.

Cooking time and End Cooking Time: To cook for a selected length of time and end at a set time. When this function is set, the oven comes on automatically at the time required in order to cook for the set length of time (Cooking time) and end automatically at the indicated time (End Cooking Time)

Programming the Alarm

1 Press △ until symbol lights up. Press OK.

2 Set the period of time after which you wish the alarm to sound by pressing ▽ or △.

3 The clock beeps twice, the current time is displayed and symbol lights up permanently to indicate that the alarm has been set.

4 When the set period of time comes to an end, the alarm sounds and symbol starts to flash.

5 Press any button to stop the alarm; symbol goes out.

You can consult the remaining time at any moment by pressing ▽ or △ until symbol flashes and then pressing OK. You can also modify the set time at this point by pressing ▽ or △. The clock beeps twice to confirm the change.

If you wish the remaining time to be displayed until the end of the set period of time, press ▽ or △ until symbol flashes and then press OK and keep it pressed in. Symbol flashes. Keep OK pressed in again to return to the real time.

Setting the Cooking Time

1 Press ▽ or △ until symbol lights up. Press OK.

2 Select the period of time you wish to cook for by pressing ▽ or △.

3 The clock beeps twice, the current time is displayed and symbol lights up permanently to indicate that the oven will turn itself off automatically.

4 Select a cooking function and temperature.

5 When the cooking time comes to an end, the oven turns itself off, the alarm sounds and symbol flashes.

6 Press any button to stop the alarm and turn the oven back on again.

7 Set the controls to ⏻ to turn the oven off.

You can consult the remaining cooking time at any moment by pressing ▽ or △ until symbol flashes and then pressing OK. You can also modify the set time at this point by

pressing ▽ or △ . The clock beeps twice to confirm the change.

If you wish the remaining time to be displayed until the end of the set period of time, press ▽ or △ until symbol ⊢⊣ flashes and then press OK and keep it pressed in. Symbol ⊢⊣ flashes. Keep OK pressed in again to return to the real time.

Setting the End Cooking Time

1 Press ▽ or △ until symbol →⊣ lights up. Press OK .

2 Select the time you wish the cooking process to finish at by pressing ▽ or △ .

3 The clock beeps twice, the current time is displayed and symbol →⊣ lights up permanently to indicate that the oven will turn itself off automatically.

4 Select a cooking function and temperature.

5 When the set time is reached, the oven turns itself off, the alarm sounds and symbol →⊣ flashes.

6 Press any button to stop the alarm and turn the oven back on again.

7 Set the controls to ⏻ to turn the oven off.

You can consult the end cooking time at any moment by pressing ▽ or △ until symbol →⊣ flashes and then pressing OK . You can also modify the end cooking time at this point by pressing ▽ or △ . The clock beeps twice to confirm the change.

This function can be used even when you are already using the oven. To do this, follow the instructions indicated above except point number 4.

Setting the Cooking Time and the End Cooking Time

1 Press ▽ or △ until symbol ⊢⊣ lights up. Press OK .

2 Select the period of time you wish to cook for by pressing ▽ or △ .

3 The clock beeps twice, the current time is displayed and symbol ⊢⊣ lights up permanently.

4 Press ▽ or △ until symbol →⊣ lights up. Press OK .

5 Select the time you wish the cooking process to finish at by pressing ▽ or △ .

6 The clock beeps twice, the current time is displayed and symbol →⊣ lights up permanently.

7 Select a cooking function and temperature.

8 The oven remains off with symbols ⊢⊣ and →⊣ lit up. Your oven is set.

9 When the time to start cooking is reached, the oven starts up and cooks for the set period of time.

10 When the set end cooking time is reached, the oven turns itself off, the alarm sounds and symbols ⊢⊣ and →⊣ flash.

11 Press any button to stop the alarm and turn the oven back on again.

12 Set the controls to ⏻ to turn the oven off.

You can modify the end cooking time by pressing ▽ or △ until symbol →⊣ lights up and then pressing OK . You can now modify the end cooking time by pressing ▽ or △ . The clock beeps twice to confirm the change.

Important

In the event of a power cut, all the electronic clock settings are deleted and the indication 00:00 flashes on the display. It is necessary to set the time and programme the clock again.

Tray Handle

The tray handle is used when you need to remove the tray to check the food. See figures. To lift the tray out of the oven, you need to use gloves to protect yourself.

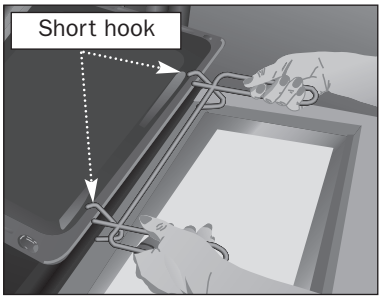

Cake tray handle position. You must put the short hook over the tray.

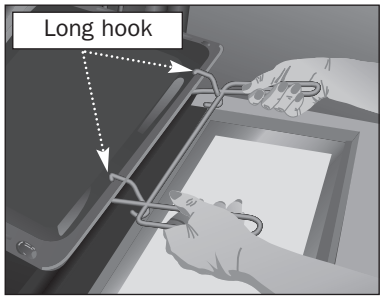

Roasting tray handle position. You must put the long hook over the tray.

BROCHURE

Manufacturer	PRIMA	PRIMA
Model	**PRD0202/203**	**PRD0 204/205**
Energy efficiency class on a scale of A (more efficient) to G (less efficient).	**A**	**A**
Heating function.		
Conventional.		
Forced air convection.	←	←
Energy consumption.		
Conventional.	- - -	- - -
Forced air convection.	**0,79 Kwh**	**0,68 Kwh**
Usable volume (litres).	**59**	**40**
Size: Small Medium Large	←	←
Time to cook standard load.		
Conventional.	- - - -	- - - -
Forced air convection.	**43 min.**	**39 min.**
Baking area.	**1300 cm²**	**1300 cm²**
Noise (dB (A) re 1 pW).	- - -	- - -

Our contribution to enviromental protection: we use recycled paper.
Cod.: 83172615/3172615-001